

Digilock KT-s and WT-s Operating & Programming Instructions



Operating & Programming Instructions

Digilock KT-s and WT-s

Digilock KT-s and WT-s are Digilock's **day-use locker locks**. Users enter a four-digit code of their choice to lock and unlock any available locker, while management has access to the lockers with a 5-digit management override code. When locked, the LED will flash to indicate that a specific locker is in use.

If **three incorrect keys or codes** are entered, Digilock will go into "**sleep state**." The lock is asleep when the LED emits a double flash and no audible sound is heard when the "C" key is pressed. Each successive incorrect entry will also result in "sleep state." The "sleep state" will last for 1 minute.

Digilock KT-s and WT-s are powered by two off the shelf 9-Volt alkaline batteries. The battery life is estimated between 3-5 years (approximately 20,000 operations) depending on usage. When the **batteries become low** Digilock emits an indicator sound, a triple beep, each time it is used. Batteries should be replaced when the low battery indicator is heard. In case the batteries no longer operate the Digilock a power jumper is available to supply bypass power to the lock.

In the following pages, you will find operating and programming instructions for Digilock KT-s and WT-s.

If you have additional questions, contact Digilock customer service or visit us online at www.digilock.com.

Operating Instructions

Digilock KT-s and WT-s

- To Lock with a User Code**

Press the "C" Key

C

Enter any four-digit code of your choice

--	--	--	--

Press the "key symbol" to lock

Ⓚ

The "LED" will flash red when locked



- To Unlock with a User Code**

Press the "C" Key

C

Enter the same four-digit code used to lock the locker

--	--	--	--

Press the "key symbol" to unlock

Ⓚ

• To Unlock Using the Management Code

Press the "C" Key



Enter the five digit management code

--	--	--	--	--

Press the "key symbol" to unlock




• To Relock Using the Management Code

Press the "C" Key



Press the "key symbol" twice

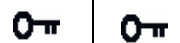

Enter the five digit management code

--	--	--	--	--

Press the "key symbol" to lock



The "LED" will flash red when locked



Programming Instructions

Digilock KT-s and WT-s

- **To Program a New Management Code Using the Existing Management Code**

Press the "C" Key



Press the "key symbol"



Enter the existing 5-digit management code

--	--	--	--	--

Press the "key symbol"



The lock will be in programming mode when the "LED" emits a **solid** green light



Enter the new 5-digit management code

--	--	--	--	--

Press the "key symbol"



The "LED" will emit a **solid** red light



Re-enter the new 5-digit management code

--	--	--	--	--

Press the "key symbol"



A **double tone** signifies successful programming¹



¹ If the programming sequence is not terminated properly, the new Management Code will not be registered to the lock. The lock will keep (if any) existing registered Management Code. If you do not enter a new Management Code to the lock after entering programming mode, the programming sequence will expire in fifteen seconds and the existing code will still operate the lock.

- **To Enable or Disable Automatic Unlock²**

Automatic Unlock² is an optional feature that will only be activated when it is programmed. It can be disabled at any time with the registered management key.

Press the "C" Key



Press the "key symbol"



Enter the existing 5-digit management code

--	--	--	--	--

The LED will emit a **solid** green light



Press the "1" through "8" for the number of hours



For example, if "3" is pressed Digilock will automatically unlock 3 hours after it was locked.

or

Press "9" to disable the Automatic Unlock Feature



Enter the existing 5-digit management code

--	--	--	--	--

Press the "key symbol"



A double tone signifies successful programming



² **Warning:** Automatic Unlock is an optional feature that functions only if it is activated. Digilock is shipped with this feature disabled. Activation of this feature is not recommended as it may pose liability issues depending on your facilities operation.

• **To Enable or Disable Flashing LED**

Press the "C" Key

C

Press the "key symbol"

Ⓚ

Enter the existing 5-digit management code

--	--	--	--	--

The LED will emit a **solid** green light



Press "**0**" to disable the Flashing LED feature

0

or

Press "**9**" to enable the Flashing LED feature

9

Enter the existing 5-digit management code

--	--	--	--	--

Press the "key symbol"

Ⓚ

A **double tone** signifies successful programming

