





# Digilock

## Instructions for Changing the Batteries

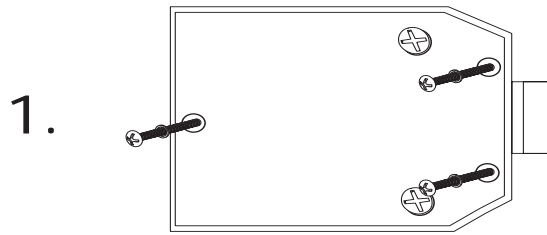

Open the door and remove the three small screws located on the back plate.

2. Remove the back plate and carefully replace batteries. Avoid pulling and tugging on connector wires.

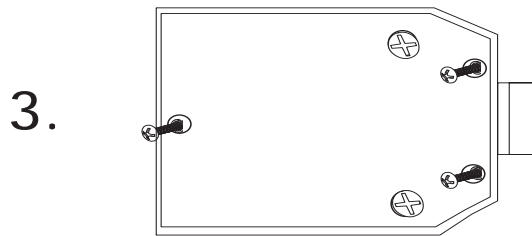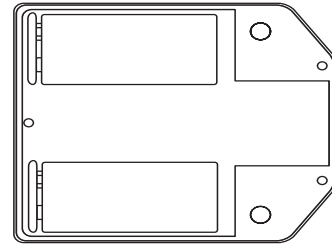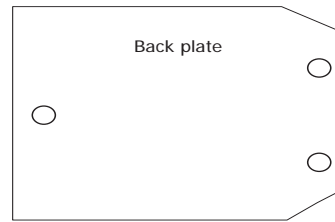

Replace back plate. Test the batteries by testing all functions of the lock while the door remains open.

Note: Depending on the model of your Digilock, the rear unit may look slightly different and will have either 9-Volt, AA or AAA Batteries. The instructions on replacing the batteries for all models remain the same. For information on which batteries your lock will take, refer to your Operating and Programming Instructions.