


# Digilock

## Instructions for Resetting the Lock

If the lock is not responding to the valid user and management codes/keys, you will need to reset the lock.

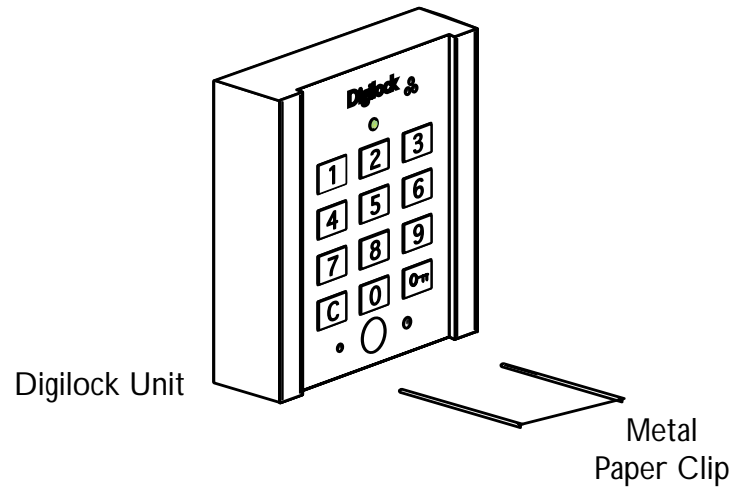

- 1) Take a non-coated metal paperclip and bend it similar to the shape in the drawing above.
- 2) Firmly insert the paper clip in the two small insertion holes located on the front lower face of the lock, making sure that both ends are touching the back of the insertion holes. (For Digilock T-30, T-52 and T-70 the insertion holes are located on the upper face of the front unit).
- 3) Hold the paperclip in place until the lock emits a triple beep. The triple beep indicates that the lock was properly reset.

Note: Resetting the lock will not unlock the lock or change the user codes/keys.